



Twin-pipe turn-head distributor

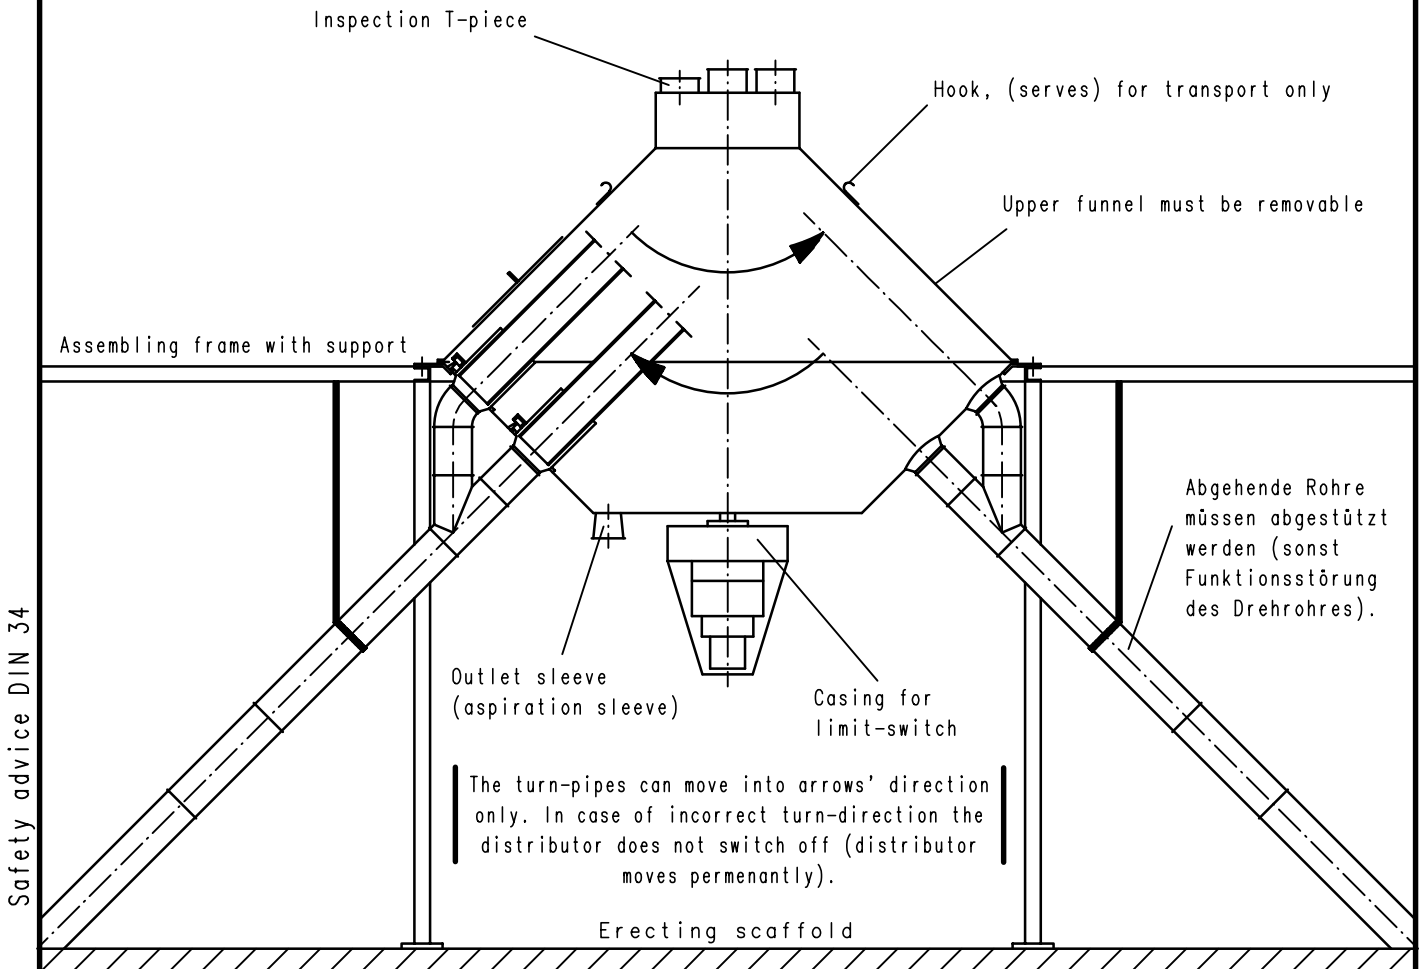

Adjusting the limit-switch

(Adjustment only through limit-switch)

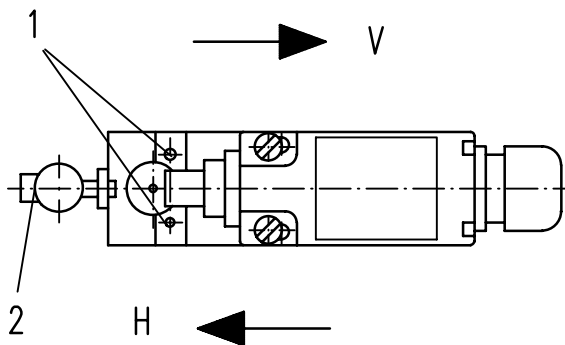

1. Loosen fastening screws (1) for limit-switch panels.
2. Push limit-switch in direction V by means of adjusting screw (2), if swivel pipe stops before one specific outlet.
- 2a. Push limit-switch in direction H by means of adjusting screw (2), if swivel pipe stops after one specific outlet.
3. After correct adjustment tighten fastening screws (1).

Denomination

Operating instructions

(Twin-pipe turn-head-distributor 45° and 60° pipe inclination)

Date

05/95

Drawing-No.

BAL/DV

Index